

Operating and installation instructions for condenser tumble dryer PT 7135 C

To avoid the risk of accidents or damage to the machine it is **essential** to read these instructions before it is installed, commissioned and used for the first time.

en - GB

M.-Nr. 06 975 360

Caring for the environment

Disposal of the packing material


The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation!

Rather than just throwing these materials away, please ensure that they are offered for recycling.

Disposal of your old machine

Electrical and electronic machines often contain materials which if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your machine. Please do not therefore dispose of it with your household waste.

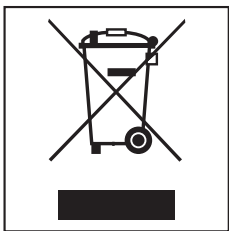

Please dispose of it at your local community waste collection / recycling centre and ensure that it presents no danger to children while being stored for disposal.

It should be unplugged or disconnected from the mains electricity supply by a competent person.

Energy saving tips

To avoid unnecessarily long drying times and high consumption of energy:

- Make sure that your laundry is thoroughly spun before drying. The higher the spin, the greater the savings that can be made in energy and time during drying.
- Load according to the optimum amount of laundry recommended for the programme being used. Underloading is uneconomical. Overloading gives a poorer quality of drying and may cause unnecessary creasing.
- Make sure the room in which the dryer is located is well ventilated.
- After every cycle remove the fluff from the fluff filter in the door and in the door opening (see "Cleaning and Care").
- Check the condenser unit from time to time and clean it when necessary.

Caring for the environment	2
Warning and Safety instructions	6
Operating the tumble dryer	11
Control panel	11
Displays	12
Before using for the first time	14
Notes on laundry care	15
Care symbols	15
Tips on drying	15
How to dry correctly	16
Brief instructions	16
Favourite programmes	19
Selecting/changing a favourite	19
Low temperature	21
Saving a favourite programme	21
Timer	22
Programme chart	23
Changing the programme sequence	26
Payment system	26
Cancelling a programme	26
Adding or removing laundry after a programme has started	26

Contents

Cleaning and care	27
Cleaning the fluff filters	27
Cleaning them whilst dry	27
Cleaning them with water	28
Replacing the filters	28
Cleaning the tumble dryer	29
Cleaning the heat exchanger	30
Removing the heat exchanger	30
Checking the heat exchanger unit	31
Cleaning the heat exchanger unit	31
Replacing the heat exchanger unit	32
 Problem solving guide	 33
Problem solving guide	33
Fault messages in the display	33
Other problems	35
Changing the lamp	38
 After sales service	 39
PC / Optical interface	39
Optional accessories	39
 Installation and connection	 40
View from the front	40
View from the side	41
View from the rear	41
View from above	41
Washer-dryer stack	41
Installation on a concrete plinth	42
Payment system	42
Installation site	43
Transporting the machine to its installation site	43
Levelling the machine	43
Room in which the dryer is located	43
External drainage of the condensed water	44
Electrical connection U.K.	45

Technical data 46

Settings menu ▮ 48

 Language ▮ 49

 Anti-crease action 49

 Buzzer 49

 Time of day 49

 Display contrast 50


 Display brightness 50

 Standby 50

 Extending the cooling down time 50

Settings/Supervisor level menu 51

Warning and Safety instructions

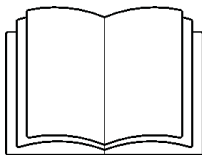

► It is **essential** to read these instructions.

This tumble dryer conforms to current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the tumble dryer, please read these instructions carefully before using it for the first time. They contain important information on its safety, installation, use and maintenance.

Keep these instructions in a safe place and ensure that they are made available to new users. They must be made aware of these warning and safety instructions.

Pass these instructions on to any future users/owners of the tumble dryer.

Correct application

► This tumble dryer is only intended for drying fabrics which have been washed in a water solution, and marked on the manufacturer's care label as being suitable for tumble drying. "Dry cleaning kits" for freshening up garments in a tumble dryer are

increasingly available on the market. If using, do so at your own risk, and follow the instructions provided on the packaging.

Any other applications may be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.

► This tumble dryer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they are supervised whilst using it or have been shown how to use it by a person responsible for their safety.

► Keep children away from the tumble dryer at all times. It is not a toy! To avoid the risk of injury do not allow them to play on or near it or to play with its controls. Supervise its use by the elderly or infirm, and supervise children whilst you are using it.

Technical safety

► Before setting up the tumble dryer, check it for any externally visible damage.

Do not install or use a damaged tumble dryer.

► Do not make any alterations to the tumble dryer, unless authorised to do so by Miele.

Warning and Safety instructions

► The electrical safety of this tumble dryer can only be guaranteed when continuity is complete between it and an effective earthing system which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and regularly tested, and where there is any doubt the on-site wiring system should be inspected by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

► Unauthorised repairs could result in unforeseen dangers for the user, for which Miele cannot accept liability. Repairs should only be undertaken by a Miele approved service technician. Ensure current is not supplied to the tumble dryer until after maintenance or repair work has been carried out.

► Faulty components must only be replaced by genuine Miele original spare parts. Only when these parts are fitted can the safety standards of the tumble dryer be guaranteed.

► To ensure the correct performance of the machine and to prevent the risk of faults and fire, it is important to check the machine and carry out maintenance on a regular basis.

► In the event of a fault or for cleaning purposes, the tumble dryer is only completely isolated from the electricity supply when:

- it is switched off at the wall socket and the plug is withdrawn, or
- it is switched off at the mains, or

- the mains fuse is disconnected.

► This tumble dryer may only be used in mobile installations such as ships, caravans, aircraft etc. if a risk assessment of the installation has been carried out by a suitably qualified engineer.

► In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the tumble dryer and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

Correct use

► Do not let anyone sit or lean on the door, as this can cause the tumble dryer to tip up. Danger of injury.

► Always close the door after use. This way you will avoid the danger of:

- children climbing onto or into the dryer or hiding things in it.
- pets or other small animals climbing into it.

► The tumble dryer must not be hosed down.

► Always keep the area around the tumble dryer free of dust and fluff. Dust drawn into the appliance can, over time, cause blockages. Faults can then occur as well as the risk of fire.

Warning and Safety instructions

► The dryer must not be used without the fluff filters in place or if the fluff filters are damaged in any way.

Damaged filters can cause operational faults and blockages in the airways, condenser unit and heating elements.

Fire hazard!

In the event of a damaged filter, switch the dryer off and replace the filter with a new one.

► The fluff filters must be cleaned regularly.

► The dryer must not be used without the condenser unit in place.

► The fluff filters must be thoroughly dried after cleaning. Damp or wet filters could cause operational faults.

► Do not install the tumble dryer in a room where there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.

There is a risk of damage if the condensed water is allowed to freeze in the pump, hoses and / or condensed water container.

The ambient room temperature should be between +2°C and +35°C.

► If the water is drained externally through the drain hose instead of being collected in the condensed water container, make sure the drain hose is securely attached if you hang it in a sink or basin to avoid the hose slipping and the water causing damage.

► Condensed water is not drinking water.

It can cause health problems in both people and animals.

Warning and Safety instructions

► To prevent the risk of fire, the following textiles must not be dried in this tumble dryer:

- items which have not been washed.
- items, such as workwear, which have not been thoroughly cleaned and which are still soiled with grease, oil or other desposits (such as cosmetics, lotions etc).
If items have not been thoroughly cleaned there is a danger that these might ignite when heated, even after they have been removed from the dryer at the end of the programme.
- items which have been treated with inflamable cleaning agents or contain residues of acetone, alcohol, benzine, petrol, stain remover, turpentine, wax, wax remover or other chemicals (e.g. mops and floor cloths).
- items which have been splashed with hair lacquer, hair spray, nail varnish remover or similar substances.

When washing such heavily soiled items ensure that you use sufficient detergent and select a high temperature. If in doubt, wash the items several times.

► To prevent the risk of fire, the following textiles or products must not be dried in this tumble dryer:

- fabrics which contain a large proportion of rubber, foam rubber or rubber-like materials. For example, products made from latex foam rubber, shower caps, waterproof textiles, rubberised articles and items of clothing and pillows with foam rubber filling.
- which contain padding or fillings (e.g. pillows, jackets). If these were damaged the filling could get out with the risk of igniting in the dryer.

► In many programmes, the heating phase is followed by a cooling down phase to ensure that the items are not too hot to handle when you remove them (this also avoids the danger of the laundry self-igniting). The programme is not finished until the cooling down phase is complete.

Ensure that you always wait until the end of the programme before removing the laundry.

► **Warning:** Do not switch the tumble dryer off before the end of the drying programme. If this was done and the laundry was then removed immediately it could give off a great amount of heat.

► Fabric conditioner and similar products must be used according to the instructions on the manufacturer's packaging.

Warning and Safety instructions

► Benzine, petrol, paraffin or any easily flammable liquid must not be stored or used near the tumble dryer. Fire and explosion risk!

► Do not allow air contaminated with chlorine, fluorine or other vapours containing solvents to get into the tumble dryer. Fire hazard.

► For tumble dryers with stainless steel surfaces:

The stainless steel surfaces must not come into contact with liquid cleaning and disinfecting agents which contain chlorine or sodium hypochlorite. These agents can have a corrosive effect on stainless steel.

Aggressive vapours containing chlorine can also be corrosive.


Do not store containers of these agents near the machine.

Accessories

► Only use genuine Miele spare parts and accessories with this machine. If spare parts or accessories from other manufacturers are used, this will invalidate the guarantee, and Miele cannot accept liability.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Control panel

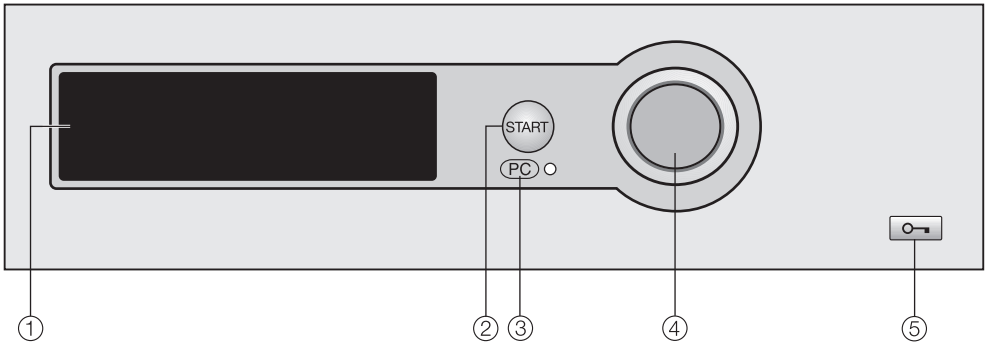

① **Display**

See the following pages for more information.

② **Start button**

③ **PC / Optical interface**

This is used by service technicians to run diagnostic checks on your machine and can also be used to update programming data in the future.

④ **Multi-function selector**

This is used to select menu options (by turning it) and to confirm your selection (by pressing it).

⑤ **Key button**

Opens the door.

Operating the tumble dryer

Displays

Entry menu

1	Cottons	Programme selection ...
2	Minimum iron	Settings ▸ ...
3	Woollens handcare	
4	Smoothing	10:00

When the machine is switched on, the entry menu with 4 favourite programmes (factory default settings which can be changed) will appear with *Programme selection* highlighted.

Multi-function selector

Turning the multi-function selector moves the highlighting to the next option.

Pressing the multi-function selector selects the highlighted option.

Programme selection

There are two ways of selecting a programme:

Option 1:


- Select the *Programme selection* menu in the display and confirm your selection by pressing the multi-function selector.

Option 2:

- Select one of the four programmes on the left hand side of the display. These are favourite programmes which you can set to suit your individual requirements or replace with other programmes of your choice (see "Favourite programmes" for more details).

Operating the tumble dryer

Programme selection menu

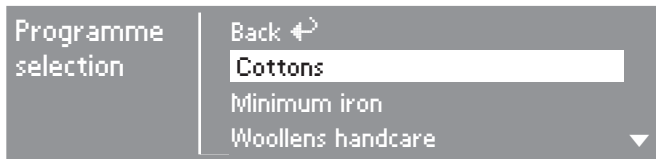

- By turning the multi-function selector you can select any programme. The highlighting will move up or down depending on the direction the multi-function selector is turned in.

The ▲ ▼ arrows on the right of the display indicate the direction and further options.


- Pressing the multi-function selector takes you to the **main menu** of the drying programme selected.

Drying programme main menu



- Turn the multi-function selector to highlight either the "Drying level" or the "Programme".
 - Everything in the display (including *Low temp.*, *Timer*, *Save*, *Back*) can be highlighted and then confirmed by pressing the multi-function selector.

Settings menu

The *Settings* menu  is used to alter the tumble dryer's electronics to suit different requirements.

Before using for the first time

Before using the machine for the first time ensure that it is correctly installed and connected. See "Installation and connection".

Welcome screen

When the tumble dryer is switched on for the first time, the welcome screen will appear.

The welcome screen will not appear again once a programme lasting longer than 1 hour has been completed.

After a few seconds the display will change to the screen for setting the language.

Language




- Select the language you want and confirm your selection.

Setting the time of day

- Set the hour with the multi-function selector and confirm this setting. Then set the minutes. Confirm the selection again to save the time of day in memory.

Care symbols


Before drying check the drying symbol on the care label. If there are no symbols, dry at your own risk!

-  Dry at normal temperature
-  Dry at a low temperature
-  Do not tumble dry

Tips on drying

- Always observe the maximum recommended loads given in the "Programme chart". Never overload the drum.

Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.

- Do not put soaking wet items into the tumble dryer. Spin them thoroughly after washing using the appropriate spin speed.
- For delicates and fabrics with the following care label  select *Low temperature*.
- Open jackets so that they can dry evenly.
- Woollens and wool blends tend to become matted and shrink if dried in a tumble dryer. They can, however, be "fluffed up" using the *Woollens handcare* programme.
- Down-filled garments have linings which have a tendency to shrink, depending on the quality of the item. They can be partially dried using the *Smoothing* programme.
- Pure linen should only be machine dried if specified as suitable by the manufacturer on the care label, as the surface of the fabric may otherwise become rough. They can be partially dried using the *Smoothing* programme.
- Loopknit garments (e.g. T-shirts and underwear) tend to shrink depending on their quality. Do not over-dry these textiles. When purchasing these garments it is advisable to take their shrinkage properties into account.
- Minimum iron fabrics and 100% cotton shirts or blouses tend to crease more, the larger the load, particularly when the weave of the fabric is very fine. Reduce the load or use the *Shirts* programme.
- Starched laundry can be dried in the tumble dryer. To achieve the usual finish, double the amount of starch should be used.
- New dark coloured garments should be washed and dried separately from light coloured garments to avoid the danger of colours running and discolouring other garments or even plastic components in the machine. Dark coloured fibres can also settle on light coloured garments and vice versa.

How to dry correctly

Brief instructions

The headings numbered (1, 2, 3 ...) show the operating sequence and can be used as a brief guide to using your machine.

1 Sort the laundry


To ensure an even drying result separate out the washed laundry and sort it according to:

- ... the drying level required
- ... the type of fibre or weave
- ... size
- ... the moisture content after spinning.


⚠ Make sure that objects e.g. detergent dispensing balls have been removed from the laundry. They could melt, and cause damage to the dryer or the laundry.

- Check seams and stitching to ensure that padding and linings are intact.
- Fasten duvet covers and pillow cases to prevent small items from being trapped inside them.
- Fasten zips, hooks and eyes etc.
- Tie fabric belts and apron strings.
- Sew in or remove underwiring from bras.

2 Load the tumble dryer

- Press the  button to open the door.
- Load the laundry loosely into the drum.

Do not overload the drum. See the "Programme chart" for recommended loads for each programme. Overloading can cause unnecessary wear and tear to the laundry and give a disappointing drying result.

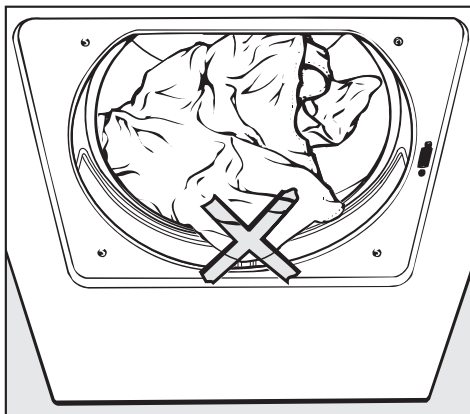

Check the laundry is right inside the drum so that it cannot get trapped or damaged when the door is shut.

- Shut the door either with a gentle swing, or lean against it and push it shut.

③ Select a programme

You can select a programme either by:

- selecting a favourite programme, or
- by going into the *Programme selection* menu.

■ If required, you can then select *Low temperature* and/or the *Timer* (Delay start time) from the relevant sub-menu.

Please note that the programme duration shown in the display may vary according to the programme selected (see "Estimated time remaining").

The *Start* button will flash as soon as a programme can be started.

Payment systems

If your machine has a payment system, the amount of credit required will appear in the display.

Credit will be lost if the door is opened or the programme cancelled after it has started.

④ Start the programme

■ Press the *Start* button.

The *Start* button will light up.

- *Programme start* will appear in the display, followed by *Drying* and the programme duration.
- With sensor drying programmes the drying level reached, e.g. *Machine iron ... Hand iron...* etc., will appear in the display later on.

You can select the following while drying is in progress:

- *Timer* to call up the current time of day and the estimated end time of the programme.
- *Save* to save the current programme as a favourite.
- *Cancel* to cancel the current programme.

How to dry correctly

Estimated time remaining

When a programme is selected the estimated drying time will appear in the display. Please be aware that it is only an estimate!

The following factors all affect the estimated time remaining: residual moisture content after spinning; type of fabric; size of load; room temperature; fluctuations in power supply.

The electronics continually assess conditions in the machine and adjust the estimated time remaining for a more accurate reading. Because of this the time displayed can alter during the course of a programme.

In the same way, the *Woollens handcare* and *Smoothing* programmes can finish earlier than expected if a certain temperature is reached. This can happen with particularly fine fabrics or if items were partly dry beforehand.

Before the end of a programme

There is a cooling down phase at the end of the drying sequence: *Cooling down* will appear in the display. The programme will not finish until the cooling down phase has been completed.


There is no cooling down phase at the end of the following programmes: *Woollens hand care*, *Smoothing*.

At the end of a programme

Anti-crease (if selected) and *Finish* will appear in the display at the end of the programme.

During the anti-crease phase (if selected) the drum will turn at intervals for an hour to help prevent creasing.

5 Remove the laundry

- Press the  button to open the door.
- Remove the laundry.

Check that all items have been removed from the drum. If items are left in the dryer, they could be damaged by overdrying when the dryer is next used.

The drum lighting will come on when the door is opened. It will go out a few minutes later to save energy.

- Close the door.

Maintenance after each drying programme


- Please see "Cleaning and care" for details.

You can programme your four most frequently used drying programmes to appear in the left hand side of the display. The *Save* option must be activated via the *Settings/Supervisor level* menu before they can be programmed. This must be done by a Miele service technician.

Selecting/changing a favourite


- Close the door.

Entry menu

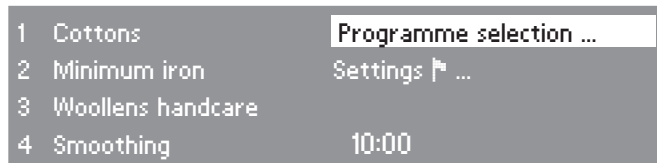

- Use the multi-function selector to select the programme you want and confirm your selection.


Main menu

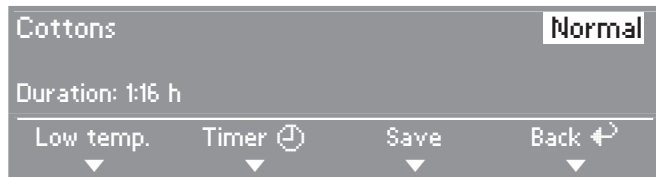

- You can highlight the programme (*Cottons*) or the drying level again (*Normal*) by turning the multi-function selector.
- Confirm your selection of the part you want to change by pressing the multi-function selector once.

Depending on the option highlighted, the following will be displayed:

– Programme selection

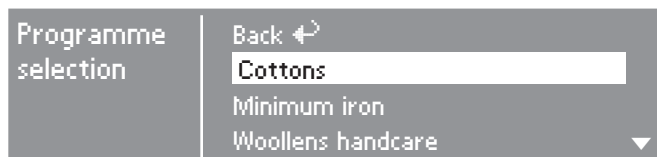

- Use the multi-function selector to select the programme you want and confirm your selection.

Favourite programmes


Important: If you do not make a selection in the sub-menu within approx. 20 seconds, the display will revert to the main menu.

– Drying levels programme



- Use the multi-function selector to select the drying level you want and confirm your selection.
- The display will show which drying levels can be selected for each individual programmes.

– Warm air, Cool air programmes

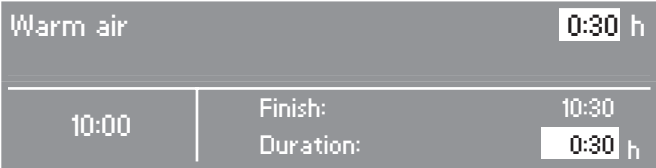

- You can use the multi-function selector to increase (up to a max. of 2 h *cold*/1h *warm*) or decrease the duration.


The programme end time for the duration selected will also appear.

– Other programmes

You cannot alter the drying level or duration for the other programmes.

Low temperature



- Select *Low temperature* for all delicate or minimum iron fabrics with the  care label (e.g. acrylic garments).
 - Delicate fabrics are dried at a lower temperature.
 - The programme duration is longer.

Saving a favourite programme

- Select *Save*.




- Use the multi-function selector to select the number you want and confirm your selection. Your settings have now been saved with the favourite programme and will appear in the Entry menu.

Repeat the procedure if you want to customise other favourite programmes, and save them to short cut buttons which have not yet been used.

Timer


The timer can be used to select when you want the programme to end (if this option has been activated by a Miele service technician). The programme start can be delayed to start automatically in 30 minute intervals up to a maximum of 24 hours.

To open the Timer sub-menu

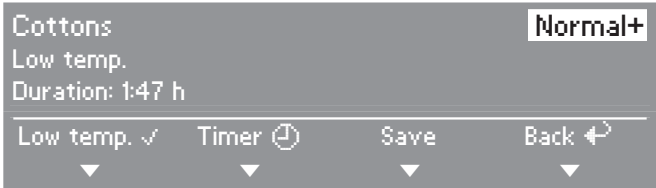

- Select *Timer*. This opens the *Timer* sub-menu.

To select a delay start time

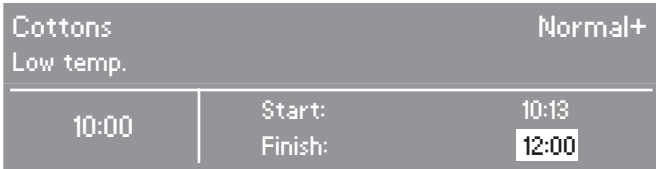

- Use the multi-function selector to select the programme end time and confirm your selection.

The programme end time will be adjusted to the next full or half hour. Once the end time has been entered, the start time of the programme will also appear.




To start the timer

- Press the *Start* button.
The timer will count down in minutes until the start of the programme. If the delay start time selected is more than one hour, the drum will turn briefly every hour to prevent creasing.

To cancel the timer

- Select *Cancel* and *Back*.

Programme chart


Cottons		Max. load: 6.5 kg*
Extra dry, Normal+, Normal**		
Fabric type	Single and multi-layered cotton fabrics such as towelling, jerseywear, underwear, flannelette bed linen.	
Notes	<ul style="list-style-type: none">– Select Low temperature for fabrics with the  symbol.– Select <i>Extra dry</i> for multi-layered and very thick fabrics.– Do not use <i>Extra dry</i> for jersey fabrics as they have a tendency to shrink.	
Hand iron Δ, Hand iron ΔΔ **, Machine iron		
Fabric type	Cottons or linen fabrics, e.g. table linen, bedlinen, starched laundry.	
Notes	<ul style="list-style-type: none">– Select Low temperature for fabrics with the  symbol.– To prevent laundry from drying out it should be rolled up until you are ready for ironing.	
Minimum iron		Max. load: 3.5 kg*
Normal+, Normal**, Hand iron Δ		
Fabric type	Minimum iron items made of cotton, synthetic or blended fabrics, e.g. shirts, blouses, skirts and table cloths.	
Notes	<ul style="list-style-type: none">– Select Low temperature for fabrics with the  symbol.– Select <i>Hand iron</i> for delicate fabrics and to reduce creasing even more, reduce the load to 1.5 kg*.– In the Minimum iron <i>Hand iron</i> programme, items are dried with very little creasing, depending on fabric type and amount of laundry.	

* Weight of dry laundry

** Note for test institutes:

Use this programme without selecting Low temperature when testing according to EN 61121 Standard.

Programme chart

Woollens hand care		Max. load: 2.5 kg*
Fabric type	Woollen fabrics.	
Notes	<ul style="list-style-type: none"> – To refresh and fluff up woollen garments quickly. Woollen fabrics are not dried completely by this programme. – Remove garments as soon as the programme has finished and leave to finish drying at room temperature. 	
Smoothing		Max. load: 3.0 kg*
Fabric type	<ul style="list-style-type: none"> – Cotton and linen fabrics. – Minimum iron items made of mixed fibres, cottons or synthetics, e.g. trousers, jackets, shirts. 	
Notes	<ul style="list-style-type: none"> – Smooths out creasing caused during the spin cycle in the washing machine. – Fabrics are not completely dried in this programme. Remove garments as soon as the programme has finished and leave to finish drying at room temperature. 	
Cool air		Max. load: 6.5 kg*
Fabric type	Any item which only needs airing.	
Warm air		Max. load: 6.5 kg*
Fabric type	<ul style="list-style-type: none"> – "Voluminous" or multi-layered fabrics whose layers have different drying characteristics, e.g. jackets, pillows. – For drying individual items, e.g. bath towels, bathing costumes, tea-towels. 	
Notes	<ul style="list-style-type: none"> – Select Low temperature for fabrics with the  symbol. – Do not select the longest drying time to start with. Check the items as you are drying them to find the optimum time. 	

* Weight of dry laundry

Programme chart

Denim		Max. load: 3.5 kg*
Normal, Hand iron Δ		
Fabric type	Denim fabrics, e.g. jeans, jackets, skirts, shirts.	
Shirts		Max. load: 2.5 kg*
Normal, Hand iron Δ		
Fabric type	Shirts and blouses.	
Outerwear		Max. load: 3.5 kg*
Normal, Hand iron Δ		
Fabric type	Outerwear which is suitable for drying in a tumble dryer.	
Proofing		Max. load: 2.5 kg*
Fabric type	For drying microfibre fabrics, skiwear, fine, closeweave cotton garments (poplin) or tablecloths which are suitable for drying in a tumble dryer and have been treated to provide a water and dirt resistant finish.	
Notes	<ul style="list-style-type: none"> – This programme includes a proofing agent fixing phase. – Only use proofing agents which are stated by the manufacturer as being "suitable for use on membrane textiles" as these contain fluorochemical compounds. – Do not dry items which have been treated with proofing agents containing paraffin. Fire hazard! 	
Towelling		Max. load: 2.5 kg*
Normal +		
Fabric type	Single and multi-layered towelling items, e.g. towels, bath robes, terry sheeting.	

* Weight of dry laundry

Changing the programme sequence

Payment system


If your machine is fitted with a payment system, opening the door or cancelling the programme after it has started may cause loss of credit*.

* A Miele service technician can re-set the payment system so that programming changes can be made within a specified time period.


Cancelling a programme


- Select *Cancel*.

The items will be cooled down. *Finish* will appear in the display if you confirm *Cancel* again.

- Press the  button.
- Open the door.
- Close the door.
- Select a different programme.

Adding or removing laundry after a programme has started

- Press the  button.
- Open the door.

 Do not touch the back of the drum when adding or removing items. The drum could be very hot - danger of burning.

- Add or remove items.
- Close the door.

To continue drying


- Press the *Start* button.

The time left shown in the display may now vary from the actual drying time.


Cleaning the fluff filters

Fluff from items being dried is collected by the fluff filters in the door and the door opening. Clean the filters after **each** drying programme*.

Cleaning them whilst dry

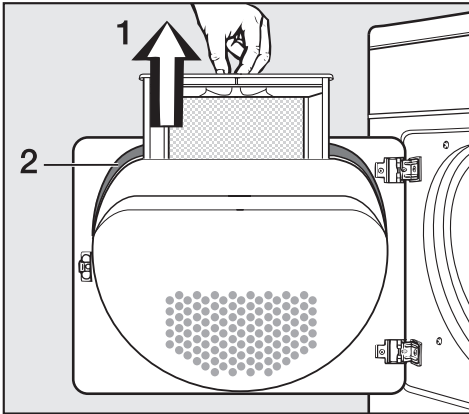


- Open the door and pull the fluff filter (1) out as illustrated.

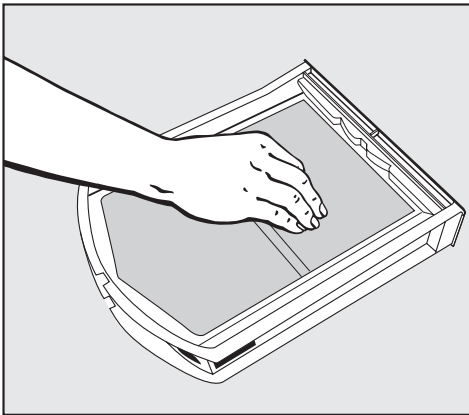


- Use your fingers or a vacuum cleaner to remove the fluff from the surface of the filter.

- Remove any fluff from the hollow part of the door opening. You could also use a cleaning brush which is available as an optional extra from your Miele dealer or the Miele Spare Parts Department or use a vacuum cleaner.
- Once clean, push the filter back into the door holder until it clicks into position. Ensure it is facing the correct way.
- Also clean the door seal (2) with a damp cloth.

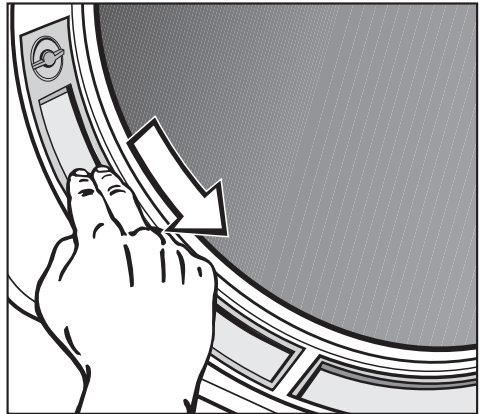

- Use your fingers or a vacuum cleaner to remove the fluff from the two fluff filters in the door opening.
- Close the door.

 * The fluff filters should be checked and cleaned regularly but always clean immediately the *Clean out airways* message appears.


Cleaning and care

Cleaning them with water

If there is a great deal of compacted fluff on any of the filters, they can be removed and cleaned under hot running water.


- Open the door and pull the fluff filter out of the door as described previously.

The two filters in the door opening can also be removed if you need to clean them with water.

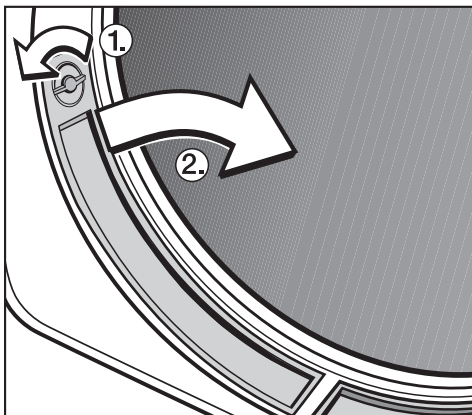


- Turn catch ① until you hear it click.
- Pull the filter by the dial out of the door opening as shown ②. Do the same on the other side.
- Rinse all the filters under hot, running water.
- Dry the filters thoroughly with care.


Replacing the filters


 Do not replace the filters if they are damp or wet. Damp or wet filters could cause operational faults.

- Push the large filter back into the door holder until it clicks into position. Ensure it is facing the correct way.
- Replace the filters in the door opening by first inserting them at the bottom and then pressing them into place at the top.
- Lock both catches (you will hear them click).

Cleaning the tumble dryer

 Disconnect the machine from the mains electricity supply.

 Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic surfaces and other parts.

 The machine must never be hosed down.


- Clean the housing and the control panel with a slightly damp cloth and a mild detergent or soapy water.
- The drum and other stainless steel parts can be cleaned with a suitable proprietary stainless steel cleaner following the manufacturer's instructions.
- Dry all parts with a soft cloth.
- A microfibre E-Cloth is available from the Miele UK Spare Parts Department which is suitable for cleaning surfaces such as stainless steel, glass, plastic and chrome without the use of chemicals.

Cleaning and care


Cleaning the heat exchanger

⚠ Check the heat exchanger unit regularly. It should always be cleaned immediately the *Clean heat exchanger* or *Clean out airways* message appears.


Removing the heat exchanger

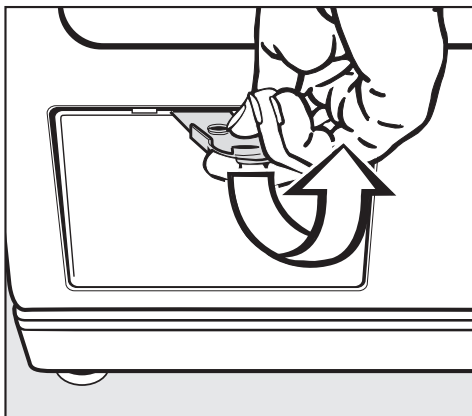


- Open the access panel.
The hooks at the side will prevent the panel from falling off.
- Now remove the panel by pulling it diagonally upwards.
- Then place it to one side.

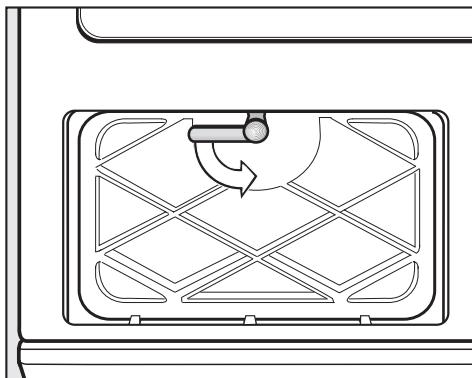

- Turn the lever on the inner cover downwards to the vertical position.
- Pull the cover forwards.
- Remove it by pulling it diagonally upwards.

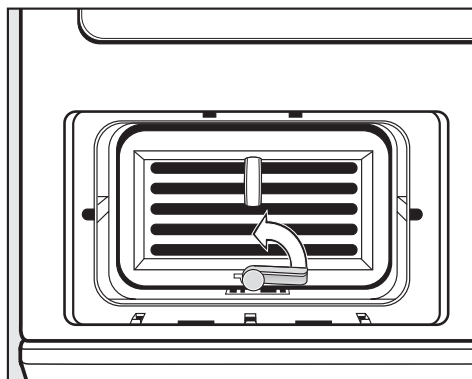


- Turn the lever on the heat exchanger to the vertical position.

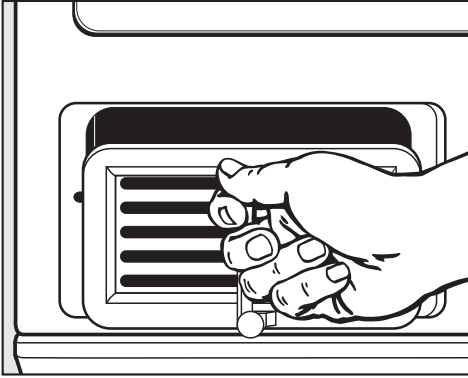

- Pull the heat exchanger unit out of its housing by the handle.

Checking the heat exchanger unit

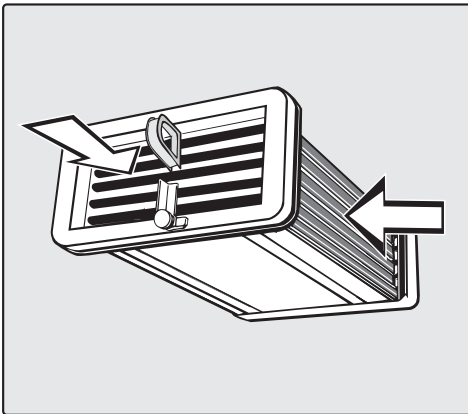

- Hold the heat exchanger unit up to the light **as shown**.
- Check to see if there is any fluff inside it.
The arrows in the illustration above indicate where to look.

If you cannot see any fluff:


- Replace the heat exchanger unit (see following page).

If you can see some fluff:

- Clean the heat exchanger unit as described below.

Cleaning the heat exchanger unit

- **When rinsing the heat exchanger unit, make sure you position it as shown in the next two illustrations.**

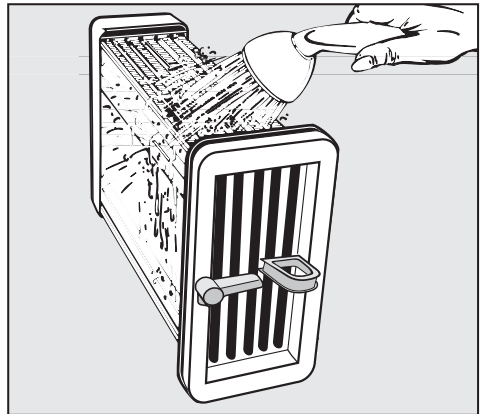

- Use a shower head or similar to rinse the unit out **as shown**.

Cleaning and care




- Then flush the unit through from the front.
- Check the heat exchanger unit again for any visible fluff and if necessary flush it through again until it has all gone.
- Shake any excess water out of the unit until no more water droplets are visible.
- Remove any soiling still visible inside the housing unit by hand using a damp cloth. Do not try to access areas you cannot reach by hand!
- Also make sure the rubber seals are clean.
The rubber seals must not be removed and must be free of kinks.

Replacing the heat exchanger unit

- With the handle facing upwards, push the heat exchanger unit back into position in its housing.
- Turn the lever down to the horizontal position, making sure that the hook on the lever clicks into the groove.

When replacing the cover after cleaning, ensure that the rubber seal fits correctly into the groove.

- Replace the cover making sure the hooks locate correctly. Hold it at an angle and push it gently downwards.
- Then turn the lever upwards into the horizontal position to lock the cover.
- Replace the service panel and press the upper edge until it clicks into position.



 It is important to ensure that both the heat exchanger unit and the cover are correctly positioned and locked otherwise water may leak from the machine.

Problem solving guide



With the help of the following notes minor faults in the performance of the appliance, some of which may result from incorrect operation, can be put right without contacting the Service Department.

Repair work to electrical appliances should only be carried out by a suitably qualified person in accordance with current local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Fault messages in the display

Problem	Possible cause	Remedy
 Adjust the load	<p>This is not a fault.</p> <p>The electronic unit has recognised that there is no laundry in the drum and cancelled the programme.</p> <p>Drying individual garments or items which are already dry can also cause the programme to be cancelled.</p>	<p>Use the Warm air programme (timed drying) to dry individual items.</p> <p>To delete the fault message:</p> <ul style="list-style-type: none"> – Open the door.
 Technical Fault A fault code eg F47 may also appear in the display	<p>No obvious cause.</p> <p>In some circumstances, <i>Clean out airways</i> will have appeared in the display already.</p>	<ul style="list-style-type: none"> – See next page: <i>Clean out airways</i>. <p>To delete the fault message:</p> <ul style="list-style-type: none"> – Confirm with <i>OK</i>.
	<p>There is a fault, if despite doing this, the programme is cancelled and the fault message appears again.</p>	<p>Contact the Miele Service Department, and quote any fault code where applicable.</p>

Problem solving guide


Problem	Possible cause	Remedy
The following appears at the end of the programme: Maintenance message Clean the heat exchanger.	The dryer is reminding you that heat exchanger unit needs cleaning.	<ul style="list-style-type: none"> – Clean the heat exchanger. To delete the fault message: <ul style="list-style-type: none"> – Confirm with <i>OK</i>.
	You can adjust the setting which controls when or if the <i>Maintenance message</i> appears.	<ul style="list-style-type: none"> – See "Settings menu , Cleaning the heat exchanger".
Clean the airways	The dryer is not working efficiently or economically. Possible causes: The fluff filters are clogged with fluff or with detergent residues.	<ul style="list-style-type: none"> – Cleaning the fluff filters is usually all that is required. However, if the <i>Clean the airways</i> message does not go out after you have cleaned them, then also check all the possible causes described under "The drying process goes on too long or even switches off". To delete the fault message: <ul style="list-style-type: none"> – Confirm with <i>OK</i>.
		You can adjust the setting which controls when or if the message <i>Clean the airways</i> appears. <ul style="list-style-type: none"> – See "Settings menu , Clean the airways".
Drain fault	The drain hose is kinked.	<ul style="list-style-type: none"> – Remove the kink. To delete the fault message: <ul style="list-style-type: none"> – Confirm with <i>OK</i>.
Programme finish time changed.	This is not a fault.	Settings were changed during the 'delay start' period, or there has been an interruption to the power supply.

Other problems		
Problem	Possible cause	Remedy
The drying process goes on too long or even switches off.	In some circumstances the following message also appears: <i>Clean the airways.</i> Please check all the possible causes and open and shut the dryer door.	
	Ventilation to and from the dryer may be insufficient (e.g. because it is installed in a small room). This has caused the temperature in the room to rise sharply.	Open a door or window while the machine is in operation for increased air flow.
	The vents below the door are blocked.	– Remove any objects that are blocking the vents.
	The fluff filters are clogged up with fluff or were still wet when they were replaced.	– Remove any fluff. – The fluff filters must be completely dry.
	Detergent residues, hair and fine fibres can block the heat exchanger.	Check the heat exchanger from time to time and clean it if necessary.
	The laundry has not been spun sufficiently.	Make sure that your laundry is thoroughly spun at the appropriate spin speed.
	The tumble dryer has been overloaded.	Do not exceed the maximum load for the programme selected.
The laundry is not sufficiently dry.	Metallic components, e.g. zips have prevented the dryer from registering the correct moisture level in the laundry.	– Open zips next time. If the problem occurs again, dry garments with long zips using the Warm air programme (timed drying).
	The load consisted of different fabrics.	– Finish drying using the Warm air programme (timed drying). – Select a different programme next time, see Programme chart.

Problem solving guide

Problem	Possible cause	Remedy
The heat exchanger unit service panel will not shut.	The inner cover of the heat exchanger unit has not been locked properly and/or the heat exchanger unit has not been positioned correctly.	<ul style="list-style-type: none"> – Ensure that the heat exchanger unit is positioned correctly and lock the cover. – Check the rubber seals.
Water leaks from the machine after the heat exchanger unit has been cleaned.	Fluff has collected at the bottom of the condenser unit housing.	<ul style="list-style-type: none"> – Use a cloth to remove any fluff from the inside of the condenser unit housing.
Items made of synthetic fibres are charged with static electricity after drying.	Synthetic fibres tend to attract static charge.	Static charge can be reduced by adding a fabric conditioner to the final rinse in the washing programme or a fabric conditioner sheet to the load when drying.
There is a build up of fluff.	Fluff is principally the result of friction when garments are being worn and washed. Machine drying hardly causes any fluff to form and has been established by research institutes to have no appreciable effect on the lifetime of the garment.	Fluff is collected by the fluff filters and can be easily removed (see "Cleaning and care").

Problem solving guide

Problem	Possible cause	Remedy
The programme does not start and the display is dark.	No obvious cause.	<ul style="list-style-type: none"> – Is the dryer switched on? – Is the door closed properly? – Has the fuse or circuit breaker tripped?
The interior drum lighting does not come on.	The lighting switches off automatically (to save energy).	It will switch on again after the door has been closed and then opened.
	The lamp needs changing.	Change the lamp as described at the end of this section.
The display is in a different language.	A different language has been selected in the Settings - Language  menu.	Set the language you want. The flag symbol will guide you.
The <i>Start</i> button light will flash when a programme is being selected.	This is not a fault. The flashing indicates that a programme can be started.	After the programme has started, the flashing will change to a constant light.
The display is dark and the light ring around the multi-function selector is not lit up. The <i>Start</i> button is flashing slowly.	The display has switched off automatically to save energy (Standby mode).	The display and the multi-function selector will light up when one of the buttons is pressed.
	The lighting is defective if it does not come on when one of the buttons is pressed.	Contact the Miele Service Department.


Problem solving guide

Changing the lamp

Disconnect the machine from the mains electricity supply.

- Open the door.

You will find the interior lamp cover at the top of the drum aperture.

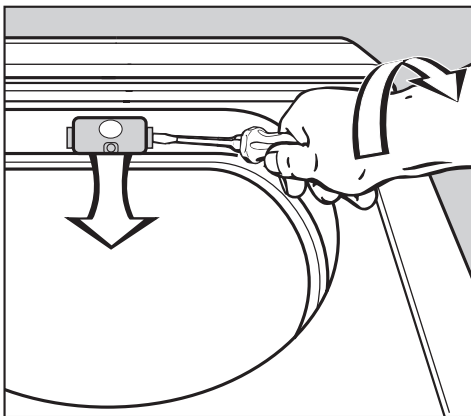

- Insert a suitable tool, such as a wide bladed screwdriver, under the side edge of the lamp cover as illustrated.
- Apply a little pressure and whilst doing so turn your wrist in the direction of the arrow to open the cover.

The cover will open downwards.

The temperature resistant lamp should only be ordered from your Miele dealer or the Miele Spare Parts Department.

The lamp specification and maximum wattage is stated on the data plate and on the lamp cover.


- Replace the lamp.
- To close the cover push it upwards and press it on the left and right until you hear it click into position.

⚠ Ensure that it is fitted into position securely, as any moisture could cause a short circuit.

In the event of any faults which you cannot remedy yourself, or if the machine is under guarantee, please contact

- your Miele dealer, or
- the Miele Service Department (see back cover for contact details).

When contacting the your dealer or the Service Department, please quote the model and serial number of your machine, both of which are shown on the data plate situated on the right hand side below the drum aperture.

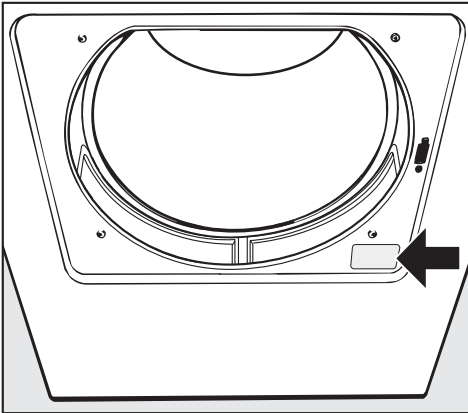

PC / Optical interface

The indicator or check light marked **PC** on the fascia panel is the interface used by Miele service technicians during servicing work for testing purposes and for undating the machine's programme data.


Optional accessories

Optional accessories for this dryer are available from your Miele Dealer or from the Miele Spare Parts Department.

Please note that telephone calls may be monitored and recorded for training purposes.

Installation and connection

View from the front

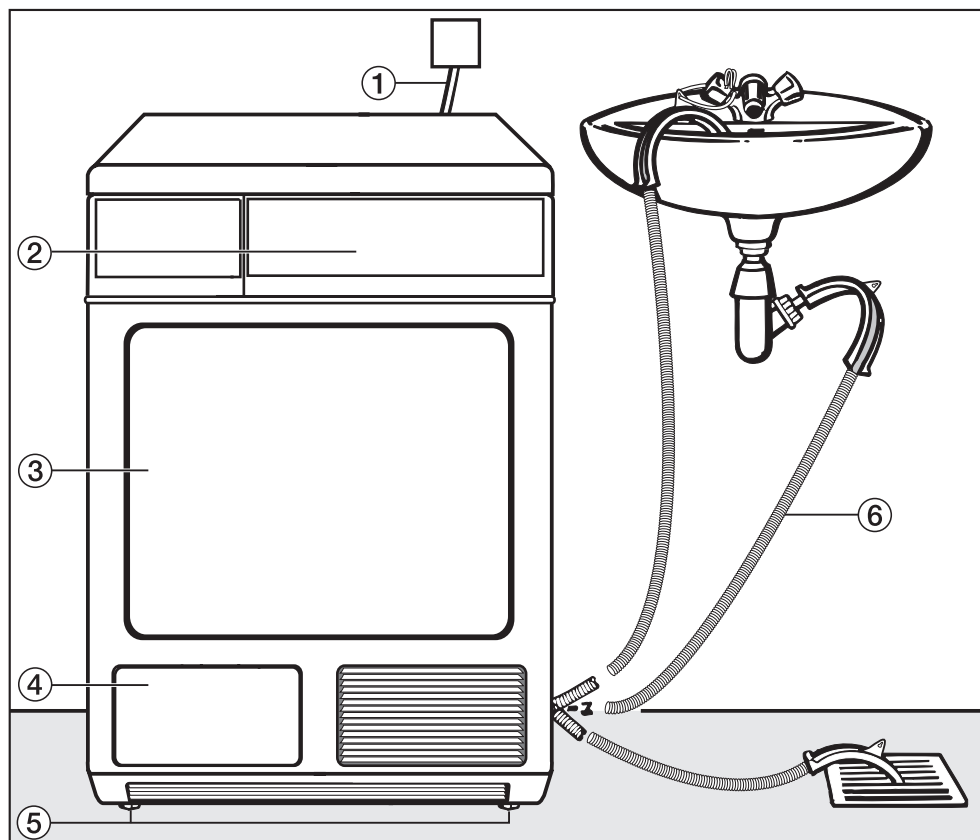

① Mains connection cable

② Control panel

③ Door


④ Service panel for heat exchanger

⑤ Four height adjustable screw feet


⑥ External drainage options (e.g. via wash basin, wash basin drain outlet or gully)
optional accessory: extension hose

Installation and connection


View from the side

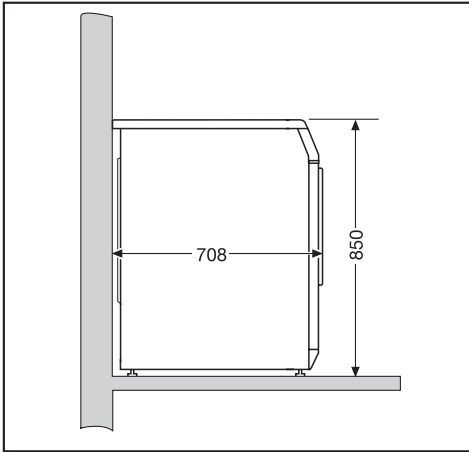

View from above

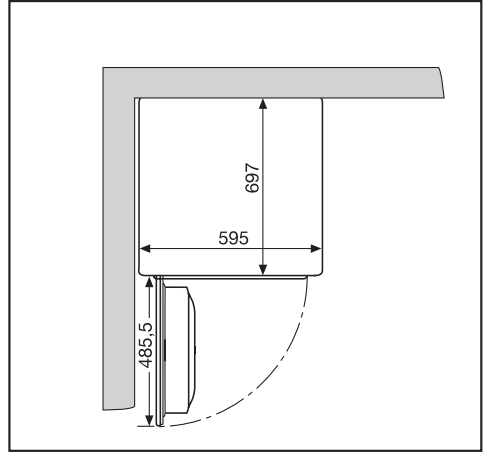


View from the rear

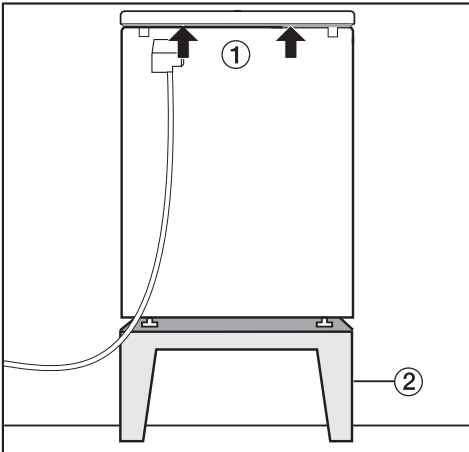

- ① Protruding lid (see arrows) for holding when moving the machine
- ② Steel plinth base (optional accessory, available open or closed)


Washer-dryer stack

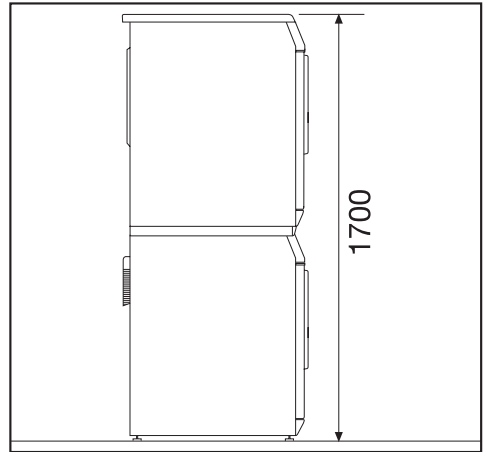

The tumble dryer can be combined with a Miele washing machine in a washer-dryer stack. A stacking kit is required which can be purchased from your Miele Dealer or the Miele Spare Parts Department. The stacking kit must be fitted by a Miele authorised service technician.

Installation and connection

Installation on a concrete plinth

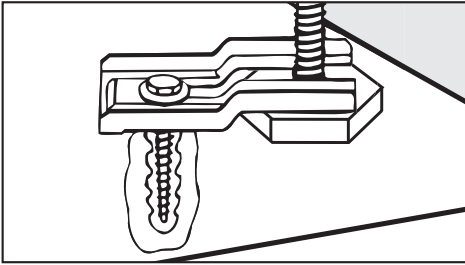

- Secure the front feet of the dryer with clamps when installing the machine on a concrete plinth.

Payment system


The dryer can be fitted with a payment system (optional accessory). This must be connected and programmed by a Miele Service technician.

Coins / tokens must be removed from the payment system regularly, otherwise it will become blocked.

⚠ Do not use devices to turn the machine off automatically, (e.g. automatic timers).

Installation and connection


Installation site

 Make sure the dryer door can be opened without hindrance after installation.


Transporting the machine to its installation site

When moving the machine you can hold it by the lid where it protrudes to the rear of the dryer. To manoeuvre the dryer out of its packing case to its installation site you will also need to hold it by the front feet.


Levelling the machine

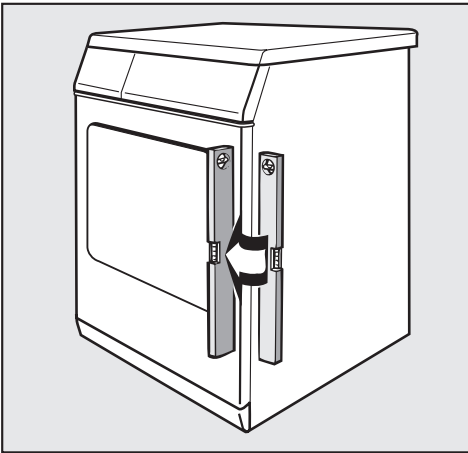

The machine must be perfectly level to ensure safe and proper operation.

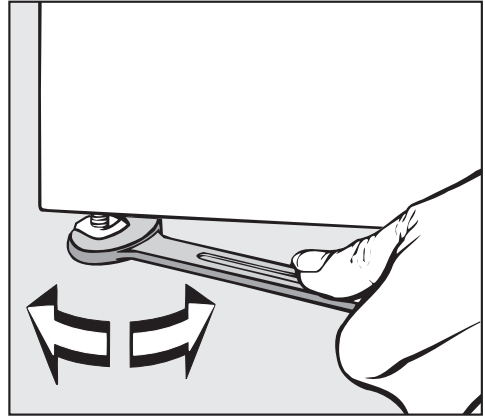

- The screw feet can be adjusted to compensate for any unevenness in the floor.

 The ventilation gaps in the plinth and the front panel must not be covered over as this would prevent a sufficient intake of air.

This tumble dryer is not suitable for building under.

Room in which the dryer is located

Air taken in for use in the drying process will be warm when it is expelled from underneath the dryer. This expelled air heats up the air in the room. It is therefore very important to ensure that the room is adequately ventilated, particularly if the dryer is located in a small room. Otherwise running times and energy consumption could be increased.


Installation and connection

External drainage of the condensed water

The condensed water is pumped away through the drain hose which is located at the back of the dryer at the bottom.

Drain hose length: 2 m

Delivery head: 1 m


 **Do not pull on the drain hose and do not allow it to become kinked** as this could damage it.

Drain hose connection:


1. Direct into a sink or basin.
 - Hook the hose over the edge and secure.
 - Use the bow-shaped guide (see illustration on the right).
2. Connected securely to a floor gully.
3. Connected directly to a sink drain outlet.

Connection to a sink drain outlet

To connect the drain hose to a sink drain outlet you will need to use the adapter and hose clip located at the back of the dryer at the bottom.

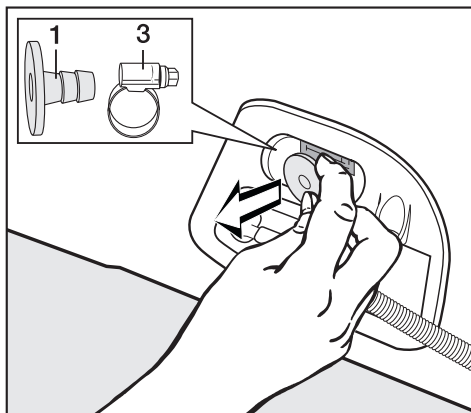

- Remove adapter **1** and hose clip **3** behind it.

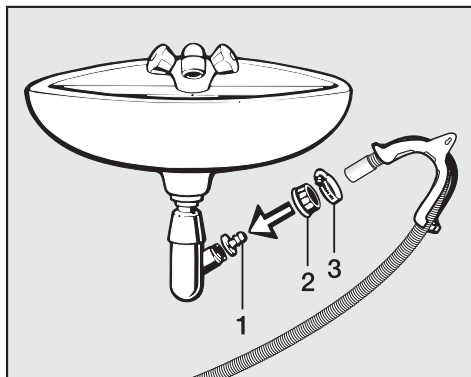

- Fit adapter **1** to the sink drain outlet using nut **2**.
- Secure the drain hose with hose clip **3** to the nut.

Electrical connection U.K.

All electrical work should be carried out by a suitably qualified and competent person, in strict accordance with current national and local safety regulations (BS 7671 in the UK).

Ensure power is not supplied to the appliance until after installation work has been carried out.

The appliance is supplied with a mains cable with moulded plug ready for connection to a 230-240V mains supply. **The voltage and connected load are given on the data plate.**

Please ensure these match the on-site mains supply. The fuse rating is quoted on the plug.

Connection should be made via a suitable switched socket which is easily accessible after installation.

For extra safety it is advisable to install a residual current device (RCD), with a trip current of 30 mA (in accordance with DIN VDE 0664, VDE 0100 Section 739).

Do not connect via an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

Non-rewireable plugs BS 1363

The fuse cover must be refitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words on the base of the plug (as applicable to the design of plug fitted).

Replacement fuses should be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

**WARNING: THIS APPLIANCE
MUST BE EARTHED**

Technical data

Height	850 mm (adjustable +7 / -7 mm)
Width	595 mm
Depth	700 mm
Depth with door open	1188 mm
Weight	58 kg
Drum volume	130 litres
Maximum capacity	6.5 kg dry weight
Length of connection cable	1600 mm
Voltage	see data plate
Connected load	see data plate
Fuse rating (UK)	see plug
Lamp wattage	see data plate
Test certificates awarded	Radio / TV suppression, VDE
Max. load bearing in operation	approx. 72 kg
Noise level (according to 3. GSGV)	< 70 dB (A)

Changing default settings

Default settings can be altered to adapt the machine to different requirements.

The way these are accessed by the operator will depend on how the machine has been programmed.

- Some settings are visible and can be changed by all operators via the *Settings* menu.


or


- All settings can be locked to prevent unauthorised access. They are then only accessible under *Settings/Supervisor level* by entering an access code.

Please contact the Miele Service Department for details.


Settings menu

To open the Settings menu

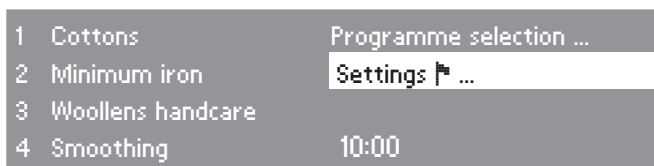

- Select *Settings*  from the entry menu and confirm your selection with the multi-function selector.

Selecting settings

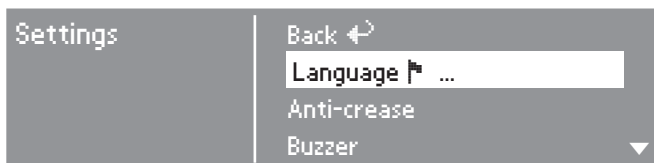

- Select the setting you want to change and confirm your selection.

If you do not make a selection in the sub-menu within approx. 20 seconds, the display will revert to the main menu.

To close the Settings menu

- Select *Back* and confirm your selection.
The display will revert to the entry menu.

Language

The display can be set to appear in one of several different languages for the current programme.

To select the language you want, go into the *Languages*  sub-menu.

- Select the language you want and confirm your selection.

The flag after the word *Language* acts as a guide to prevent a language which will not be understood from being set.

The different language setting will only apply to the programme currently in use. After the programme has finished the display will revert to the default language which was set in the *Settings/Supervisor level* menu.

Anti-crease action

The drum will continue to rotate at intervals for one hour to prevent laundry creasing, if you do not wish to remove it immediately.

The machine is delivered with this option activated (On).

Buzzer

When the buzzer function has been activated, an audible tone sounds at the end of a programme.

The buzzer will still sound if there is a fault even if it has been deactivated.

Off

The machine is delivered with the buzzer deactivated.

Normal

The buzzer sounds at the end of a programme.

Loud

The buzzer sounds at maximum volume at the end of a programme.

Time of day

First select either a 24 hour or 12 hour clock.
Then set the current time of day.

24h clock

The time of day will appear as a 24 hour clock.

12h clock

The time of day will appear as a 12 hour clock.

No clock

The time of day is not displayed. The relative time will appear in the display when *Timer* is selected.

Settings menu

Display contrast

Display brightness

There are ten different display contrast and display brightness settings.

The bar chart shows you the setting.

Standby

To save energy, the display goes out after 10 minutes and the indicator light for the *Start* button flashes slowly.

On

Standby comes on:

- if a programme is not selected.
- after the *Start* button has been pressed.
- after the end of a programme.

Not in current Prog.

(the machine is delivered with this option selected)

Standby comes on:

- if a programme is not selected.

Operating the multi-function selector switches the display back on again.

off

The display remains on all the time.

Extending the cooling down time


The cooling down phase which takes place before the end of a programme can be lengthened if required. This makes the garments easier to handle.

The bar chart shows you the setting. The machine is delivered with 0 mins (normal cooling down period) set as standard.

- The programme duration will increase accordingly.

You cannot extend the cooling down time for the *Warm air*, *Cool air*, *Woollens handcare* or *Smoothing* programmes.

Settings/Supervisor level menu

The *Settings/Supervisor level* is locked with a code to prevent it being accessed by non-authorised personnel (the Language  setting can still be altered. See "Supervisor level".).



- Select *Access via code* and confirm your selection.

To enter the code

Enter the code **0 0 0** (factory default setting). If you enter the code wrongly three times, the machine will lock out for an hour!



- Turn the multi-function selector until the first number appears. Confirm your selection of this number.
- Repeat the process until all three numbers have been entered.

After you have entered the last number you need to confirm the code:




- Confirm the code.

The supervisor level is now open.

Settings/Supervisor level menu

Language

The display can be set to appear in one of several different languages.

You can set the language you want as the fixed default language in the *Languages*  sub-menu.

- If the language shown is not the one you want turn the multi-function selector to highlight the one that you do want and confirm your selection.

Sort languages

You can select the order that you want the first 4 languages available to appear in in the display if you have first selected the *International or International, 4 langs. option from the Language menu in the Settings menu*.

Supervisor level

You can alter the access code to the supervisor level.

- Enter the old code.
- Enter a new code.

After you have confirmed the new code, the display will change to the beginning of the *Settings* menu.

Control system

You can specify whether you want your machine to be operated in *Professional for the home* mode (default setting) or in *Laundry salon* mode via the four short cut keys.

The laundry salon mode only allows 4 pre-set (favourite) programmes to be used. These cannot be changed by the user.

- **Make sure the 4 favourite programmes are set up before activating this option. (See "Favourite programmes").**

Caution: If the laundry salon mode has been selected the *Settings* menu is not accessible after exiting the *Settings/Supervisor level* menu. You cannot then get back into *Supervisor level*. If you need to access it please contact the Miele Service Department.

- The entry menu for a programme is also not accessible using the multi-function selector.
- The *Low temp., Timer, Save and Programme selection* options are also deactivated.
- The time of day cannot be displayed.
- The *Settings* and *Supervisor level* menus can then only be accessed by a Miele Service engineer.

Save

You can choose whether you want the *Save* option to appear in the main menu. The save function is required if, for example, you want to change the favourite drying programmes.

The machine is delivered with this option deactivated.

Language menu

You can select whether you want an additional welcome screen asking for a language to be selected to appear again after the end of a washing programme and before the entry menu.

There are three options:

- *national*: No additional welcome screen.
- *international*: The welcome screen will appear and the language must then be selected. Any available language can be selected. Follow the *Sort languages* setting.
- *International, 4 langs.*: The welcome screen will appear and the language must then be selected. One of four languages can be selected. Follow the *Sort languages* setting.

Delay start

Using the timer you can set the time you wish a programme to finish at (see the *Timer* section).
The timer can be set to *active* or *inactive*.

The default setting is *inactive*. If the *Timer* button is pressed the display will only show the programme duration, the time the programme is estimated to finish at and the current time of day.

Drying levels

The bar chart shows you the level that has been set.

The machine is delivered with a medium setting.

- Depending on the setting, the programme duration will be shorter (Damper) or longer (Drier).

Drying levels *Cottons* and *Minimum iron*

You can alter the drying levels for the *Cottons* and *Minimum iron* programmes.

Drying level *Cottons Machine iron*

This drying level can be altered independently.

Settings/Supervisor level menu

Cleaning out airways

Fluff should be removed after drying. The *Clean the airways* message will remind you to clean the filters when a certain amount of fluff has collected. You can decide at what level of fluff this reminder should be given.

You will have an idea of how often this should be done after a few drying programmes.

Off

Clean out airways does not appear

Heavy

Clean out airways only appears when there is a heavy build-up of fluff

Normal

Factory default setting

Light

Clean out airways appears when there is only a small build-up of fluff

Cleaning the heat exchanger

Check the heat exchanger unit from time to time and clean it if necessary. The *Clean the heat exchanger Maintenance message* will remind you. You can decide after how many hours you want the message to appear.

Setting the correct option will depend on how much fluff and dust has accumulated.

Select a more appropriate option if you find that the heat exchanger is very dirty/not very dirty at the end of the set period of time.

The machine is delivered with this option set at: 400 hours.

Displaying the residual moisture as a percentage

The residual moisture of the drying stage reached can also be displayed as a % during the programme sequence.

The machine is delivered with this option set at: Without percentage.

Cool air free of charge

If the dryer has been fitted with a payment system you can set the *Cool air* programme to be free of charge.

The machine is delivered with this option set at: Free of charge.

United Kingdom

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Tel: (01235) 554455
Fax: (01235) 554477
Customer Contact Centre Tel: (08707) 554466
E-mail: info@miele.co.uk
Internet: www.miele.co.uk

Australia

Miele Australia Pty. Ltd.
A.C.N. 005635398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: (03) 9764 7130
Fax: (03) 9764 7149
Internet: www.miele.com.au

China

Miele Shanghai Rep. Office
Room 4105 - 6, 41st Floor
Plaza 66, 1266 Nan-Jing Road/ West
Shanghai 200040
Tel: +86 21 6288 4200
Fax: +86 21 6288 4100
E-mail: mieleshanghai@cn.miele.com
Internet: www.miele.cn

Hong Kong

Miele (Hong Kong) Limited
AIA Plaza, 24th Floor
18 Hysan Avenue
Causeway Bay
Tel: +852- 2610-1331
Fax: +852-2610-1013
E-mail: mielehk@miele.com.hk
Internet: www.miele.hk

Ireland

Miele Ireland Ltd.
Broomhill Road, Tallaght, Dublin 24
Tel: (01) 461 0710
Fax: (01) 461 07 97
E-Mail: info@miele.ie
Internet: www.miele.ie



New Zealand

Miele New Zealand Limited
Unit L, 10-20 Sylvia Park Road
Mt. Wellington, 1060, Auckland, NZ
Tel: 0800 264353
Fax: 0800 463453
Internet: www.miele.co.nz

South Africa

Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: +27 (0) 11 548-1900
Fax: +27 (0) 11 548-1935
E-mail: info@miele.co.za
Internet: www.miele.co.za

Singapore

Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel: +65 6735 1191
Fax: +65 6735 1161
E-Mail: infosea@miele.com.sg
Internet: www.miele.sg

United Arab Emirates

Miele Appliances Ltd.
P.O. Box 11 47 82
Gold & Diamond Park
Sheikh Zayed Road
Building 6 / Offices Nos. 6-214 to 6-220
Dubai
Tel: +971-4-341 84 44
Fax: +971-4-341 88 52
E-Mail: info@miele.ae
Internet: www.miele.ae